

## New 40 Amp Circuit Breaker Location and Operation

A new 40-amp circuit breaker has been installed in the engine compartment to replace the original circuit breaker that was mounted on the engine. The new breaker is located on the starboard side of the engine compartment above and aft of the engine so it can be easily reached. The location of the circuit breaker is shown below (in white circle).



The operation of the breaker is as illustrated below. On the left side of the photo, the circuit breaker is set. The breaker can be tripped by pushing on the red button. On the right side of the photo, the circuit breaker is tripped. Note the black bar that swings out of the breaker housing. This bar must be pushed back into its housing to reset the breaker.



Set

Tripped

